

# EMBER ATTACKER

*By Presuuresac*

## *Self Pressuring Firefighting Backpack*

### INSTRUCTIONS

#### **Unpack & Assemble:**

Remove unit from carton and check pressure gauge. The gauge should read 50 - 660KPa. Remove nozzle from wrapping & fit to hose. Sleeve on connector must be pulled back to fit. Fit lumbar pad to Velcro on bottom of harness. Lumbar pad position can be adjusted for comfort.

#### **Put It On:**

It is easier if the unit is empty.

Put arms through shoulder straps, clip and tighten waist strap. Lumbar pad should position the waist band just above the hips. Pull ends of shoulder straps until comfortable.

#### **Fill It:**

Ensure the ball valve is turned off (red lever across hose).

Remove the jet-spray nozzle and attach hose connector to the tap.

Turn on the tap and open the ball valve (red lever along hose).

When full, close the ball valve and turn off the tap.

Disconnect the hose connector and attach the jet-spray nozzle.

#### **Use It:**

Open the ball valve.

Squeeze the lever on jet-spray nozzle and adjust brass tip to achieve the desired stream.

To keep both hands free, nozzle can be parked in loops on the shoulder straps.

#### **Take It Off:**

It is easier if the unit is empty.

Turn the ball valve off.

Lift tabs on shoulder straps to loosen, unclip waist strap and remove.

#### **Transport:**

If mounting or carrying in a vehicle for extended periods, mount upright.

A standard 9 litre fire extinguisher vehicle bracket can be used with this product.

#### **Storage:**

If the unit is stored full and pressurised, ensure the ball valve is OFF.

If the unit is stored empty, check the pressure gauge is 50 - 60KPa before further use.

Unit can be hung from the loop on top of harness.

Available from

[www.FireExtinguisherSales.com.au](http://www.FireExtinguisherSales.com.au)

phone 02 6551 0966